

GP7128-0021 PARTS LIST

| ITEM | PART | DESCRIPTION | QTY. | ITEM | PART | DESCRIPTION | QTY. |
|------|------------|----------------------------|------|------|------------|--|------|
| 1 | 05769 | Crankcase | 1 | 38C | 06736 | O-Ring, Viton | 3 |
| 1A | 05525 | Head for Oil Dipstick | 1 | 38D | 12056 | Support Ring for 38C | 3 |
| 1B | 01009 | O-Ring, Dipstick | 1 | 39 | 06426 | Seal Sleeve | 3 |
| 2 | 13000 | Oil Filler Plug Assembly | 1 | 39A | 13228 | Grooved Ring | 3 |
| 4 | 07601 | Crankcase Cover | 1 | 41 | 13417 | Pressure Ring | 3 |
| 5 | 05798 | Seal for Cover | 1 | 42 | 13369-0020 | V-Sleeve, Teflon | 6 |
| 8 | 07603 | Oil Dip Stick Assembly | 1 | 43 | 06862 | Sleeve Support Ring | 3 |
| 9 | 01009 | O-Ring, Dip Stick | 1 | 43A | 05355 | Spacer Ring | 3 |
| 10 | 22706 | Inner Hexagon Screw | 8 | 45 | 07173 | Tension Spring | 3 |
| 11 | 06725 | Spring Washer | 8 | 49 | 13159 | Stud Bolt | 8 |
| 12 | 07109 | Drain Plug | 9 | 49A | 13160 | Hexagon Nut | 8 |
| 13 | 06272 | Copper Seal | 9 | 50 | 06798 | Valve Casing | 1 |
| 14 | 05770 | Bearing Cover | 2 | 50A | 13162 | Cylinder Stud | 2 |
| 14A | 12204 | O-Ring | 8 | 51 | 04727 | Inlet Valve Assembly (51B-F) | 3 |
| 15 | 05771 | Radial Shaft Seal | 2 | 51B | 05193 | O-Ring | 3 |
| 16 | 05772 | O-Ring, Bearing cover | 2 | 51C | 04725 | Inlet Valve Seat | 3 |
| 17 | 05642 | Inner Hexagon Screw | 8 | 51D | 13130 | Valve Plate | 3 |
| 18 | 05039 | Spring Washer | 8 | 51E | 07062-0100 | Valve Spring | 3 |
| 20 | 05773 | Taper Roller Bearing | 2 | 51F | 13147 | Spacer Pipe | 3 |
| 20A | 05774 | Fitting Disc (Shim) | 1-8 | 52 | 04728 | Discharge Valve Assembly (52B-F) | 3 |
| 21 | 05645 | Holder for Shaft Protector | 1 | 52B | 05193 | O-Ring | 3 |
| 21A | 05646 | Shaft Protector | 1 | 52C | 04726 | Discharge Valve Seat | 3 |
| 22 | 05575 | Crankshaft | 1 | 52D | 13130 | Valve Plate | 3 |
| 23 | 07614 | Key | 1 | 52E | 07062-0100 | Valve Spring | 3 |
| 24 | 05777 | Connecting Rod Assembly | 3 | 52F | 13147 | Spacer Pipe | 3 |
| 25 | 05778 | Crosshead Assembly | 3 | 57 | 06078 | Compression Spring | 3 |
| 28 | 05779 | Crosshead Pin | 3 | 58 | 07699 | Plug | 3 |
| 30 | 07619 | Cover Plate | 1 | 58A | 07700-0001 | O-Ring | 3 |
| 30A | 07225-0100 | Hexagon Screw | 8 | 58B | 07693 | Support Ring | 3 |
| 30B | 13136 | Grommet | 4 | 58C | 07702 | Hexagon Screw | 12 |
| 30C | 08280 | Disc | 8 | 60 | 04576 | Plug, 3/4" NPT | 1 |
| 30D | 13154 | Cover | 1 | 61 | 12251 | Plug, 1-1/4" NPT | 1 |
| 31 | 07623 | Eye Bolt | 1 | 66 | 13362 | Disc for Crankshaft | 1 |
| 32 | 07624 | Radial Shaft Seal | 3 | 67 | 13358 | Hexagon Screw | 1 |
| 33 | 07626 | Seal Retainer | 3 | | 07662 | Tool for valve assembly | |
| 33A | 07627 | O-Ring for 33 | 3 | | 17212 | Crankcase Assembly (1-34/49/49A/50A/66/67) | |
| 33B | 07628 | Circlip for 33 | 3 | | 04671 | Manifold Assembly (50-61 w/out 50A) | |
| 33C | 07249 | Shim | 3 | | 03046 | Plunger Replacement Kit (36-45) | |
| 34 | 13137 | Flinger | 3 | | | | |
| 36 | 06427 | Plunger | 3 | | | | |
| 38 | 05354 | Seal Case | 3 | | | | |
| 38A | 06577 | O-Ring, Viton | 3 | | | | |
| 38B | 07693 | Support Ring for 38A | 3 | | | | |

GP7128 Pump Repair Kits

Plunger Packing Kit - 09464-0021

| Item | Part # | Description | Qty. |
|------|------------|---------------------|------|
| 38A | 06577 | O-Ring | 3 |
| 38B | 07693 | Support Ring | 3 |
| 38C | 06776 | O-Ring | 3 |
| 38D | 12056 | Support Ring | 3 |
| 39A | 13228 | Grooved Ring | 3 |
| 42 | 13369-0020 | V-Sleeve | 6 |
| 43 | 06862 | Sleeve Support Ring | 3 |

Oil Seal Kit # 09221

| Item | Part # | Description | Qty. |
|------|--------|-------------------|------|
| 32 | 07624 | Radial Shaft Seal | 3 |
| 33A | 07627 | O-Ring | 3 |

Valve Assembly Kit - #09520

| Item | Part # | Description | Qty. |
|------|------------|----------------------|------|
| 51B | 05193 | O-Ring | 3 |
| 51C | 04725 | Inlet Valve Seat | 3 |
| 51D | 13130 | Valve Plate | 3 |
| 51E | 07062-0100 | Valve Spring | 3 |
| 52B | 05193 | O-Ring | 3 |
| 52C | 04726 | Discharge Valve Seat | 3 |
| 52D | 13130 | Valve Plate | 3 |
| 52E | 07062-0100 | Valve Spring | 3 |
| 58A | 07700 | O-Ring | 3 |
| 58B | 07693 | Support Ring | 3 |