

## LP700-0050 and LP700-0051 SPARE PARTS LIST

<u>ITEM</u>	<u>PART #</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>ITEM</u>	<u>PART #</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	07759	Crankcase	1	35	13420	Seal Sleeve	3
2	13000	Oil Filler Plug Assembly	1	35A	22764	Lock Pin	3
3	05940	Cover Plate	1	36	08087-0050	Rope Packing	3
3A	07223-0100	Spring Ring	2	36A	13421	Guide Ring	3
3B	05051	Hexagon Screw	2	36B	05263	Support Ring	3
4	06085	Crankcase Cover	1	37	03730	Spacer Ring	3
5	07104	O-Ring	1	38	13422	Sleeve Support Ring	3
6	07186	Oil Sight Glass Assembly	1	38A	13423	Spring	3
8	06086	Oil Dipstick Assembly	1	39	13424	Leakage Seal	3
9	01009	O-Ring	1	40	07214	O-Ring (LP700-0020)	9
10	01010	Cylinder Screw	4	40	07214-0001	O-Ring (LP700-0021)	9
11	01011-0400	Spring Ring	5	41	06361	Support Ring	9
12	07109	Plug, 1/2" BSP	1	42	13425	Seal Case	3
13	06015	O-Ring	1	43	13426	Valve Retainer	3
14	07111	Bearing Cover	2	44	04394	Valve Assembly (44A-44E)	6
15	07112	Radial Shaft Seal	2	44A	04395	Spring Tension Cap	6
16	07113	O-Ring	2	44B	04396	Valve Spring	6
17	07114	Hexagon Screw	8	44C	04147	Valve Plate	6
20	07116	Taper Roller Bearing	2	44D	04121	Valve Seat	6
20A	07117	Fitting Disc	1-3	44E	04123	O-Ring	6
20B	13001	Fitting Disc	1-3	45	13428	Valve Casing	1
20C	04091	Fitting Disc	1-3	46	13429	Stud Bolt	8
21	05376	Shaft Protector	1	47	13430	Hexagon Nut	8
21A	05377	Shaft Guard Holder	1	48	07161	Copper Washer	3
22	13242	Crankshaft	1	49	07423	Plug, 1/4" BSP	3
23	13243	Fitting Key	1	50	13431	Plug	3
24	13340	Connecting Rod Assembly	3	51	13432	Cover for Valve Casing	1
25	13341	Crosshead/Plunger Assembly	3	52	13020	Disc for Crankshaft	1
28	13232	Crosshead Pin	3	53	04561	Hexagon Screw	1
29	06366	Plunger	3	54	13433	Hexagon Screw	8
30	07779	Oil Scraper	3	55	13434	Plug, 1/2" BSP	1
31	07133	Radial Shaft Seal	3	55A	06272	Copper Washer	1
32	06584	Clip Ring	3	56	07703	Plug, 1/2" BSP	1
33	13419	Support Disc	3	56A	07704	Copper Washer	1
33A	08087-0020	Grooved Ring	3		03174	Pumphead Assembly (44, 45, 48-51, 54-56A)	

## LP700-0050 and LP700-0051 REPAIR KITS

### Plunger Packing Kit

#### #09736-0050 (LP700-0050)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
33A	08087-0020	V-Sleeve	3
36	08087-0050	Pressure Ring	3
36A	13421	Guide Ring	3
36B	05263	Support Ring	3
37	03730	Spacer Ring	3
38	13422	Sleeve Support Ring	3
39	13424	Leakage Seal	3
40	07214	O-Ring	6
41	06361	Support Ring	6

#### #09736-0051 (LP700-0051)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
33A	08087-0020	V-Sleeve	3
36	08087-0050	Pressure Ring	3
36A	13421	Guide Ring	3
36B	05263	Support Ring	3
37	03730	Spacer Ring	3
38	13422	Sleeve Support Ring	3
39	13424	Leakage Seal	3
40	07214-0001	O-Ring	6
41	06361	Support Ring	6

### Valve Assembly Kit

#### #09491 (LP700-0050)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
40	07214	O-Ring	9
41	06361	Support Ring	9
44A	04395	Tension Ring	6
44B	04396	Valve Spring	6
44C	04147	Valve Plate	6
44D	04121	Valve Seat	6
44E	04123	O-Ring	6

#### #09491-0051 (LP700-0051)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
40	07214-0001	O-Ring	9
41	06361	Support Ring	9
44A	04395	Tension Ring	6
44B	04396	Valve Spring	6
44C	04147	Valve Plate	6
44D	04121	Valve Seat	6
44E	04123	O-Ring	6

### Oil Seal Kit

#### #09577

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Radial Shaft Seal	3